



# Aiptek Pocket DVII 1.3M LCD Speaker Replacement

If your sound is muffled, distorted, or not playing at all, follow these step by step instructions to replace the speaker.

Written By: Gyoza Aba Hivatal



## Step 1 — Speaker



 
- Remove the battery cover.
- Remove the batteries.

## Step 2



- Unscrew the three 4mm screws from the battery side of the device. Use a Phillips screw driver.

### Step 3

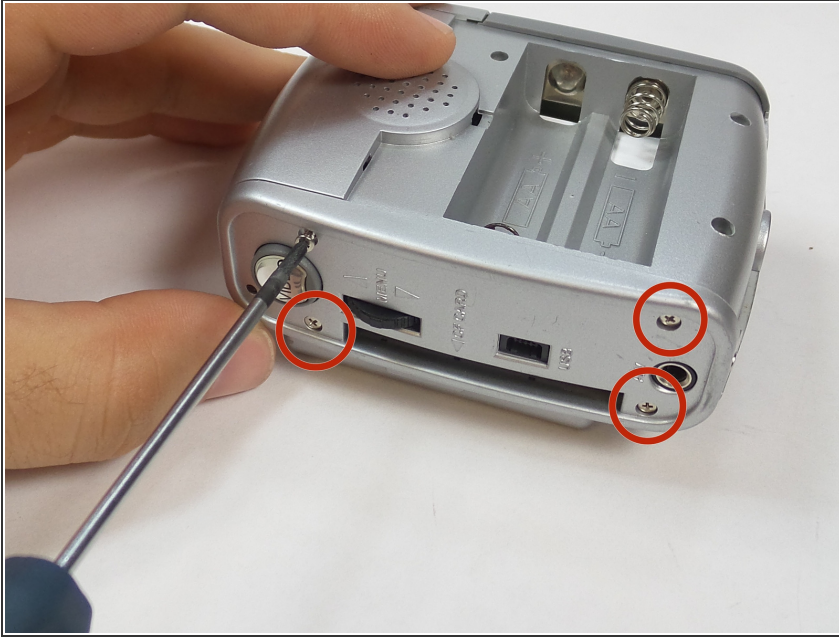

- Remove the four screws from the back side.

### Step 4



- Remove the sticky black cover dot.
- Remove the hidden screw.



## Step 5



- Remove the two screws from the top side of the device.
- Remove the two screws from the bottom side of the device.

## Step 6



 
- Remove the rear cover.
- ⚠ Be careful not to lose the spring inside.

## Step 7




- Pull back the front cover so that you can dislodge the side cover.

## Step 8

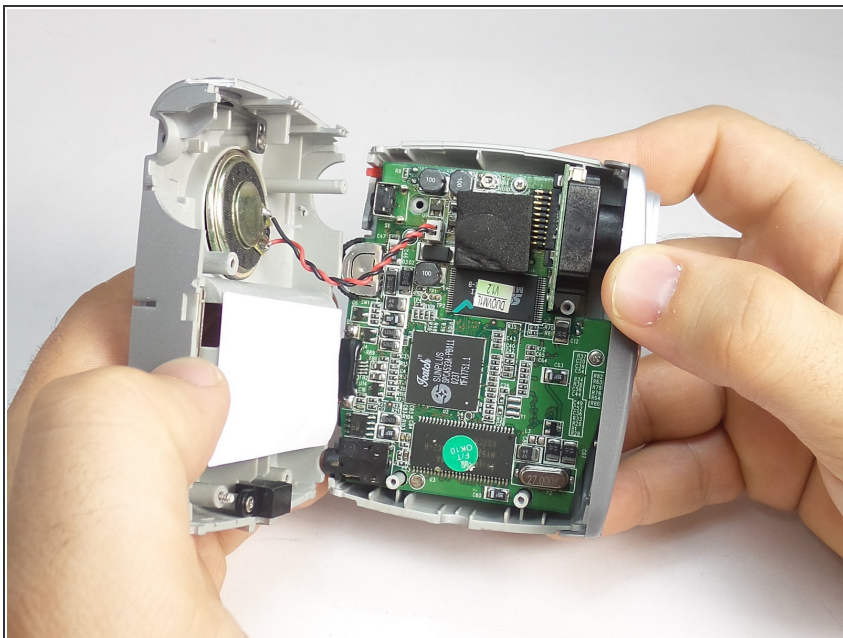

- Unfold the device and be careful not to tear the black and red power supply wires.

## Step 9

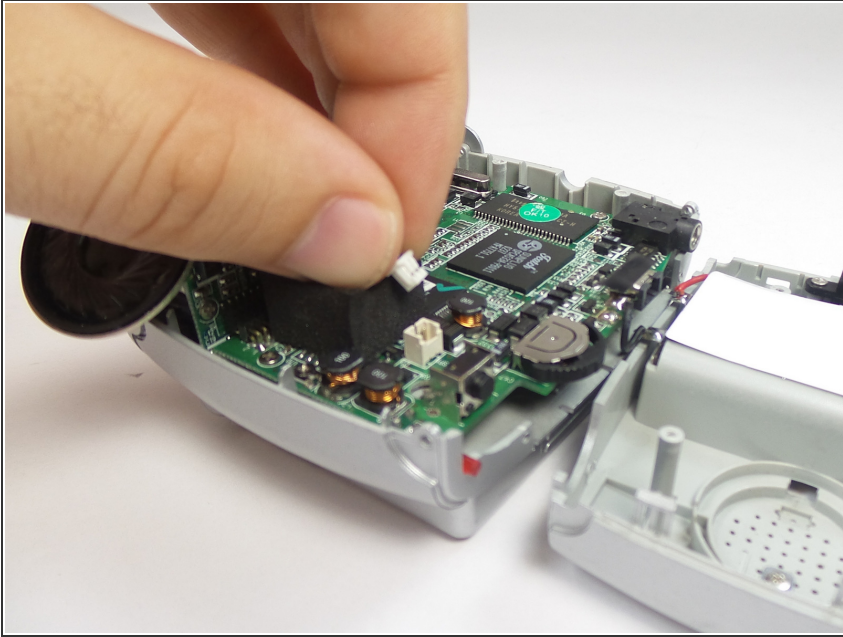 

- Unplug and replace the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:47:05 PM.